
## Comfort Easy-Fix Fabric Wrapped Wall & Ceiling Panels

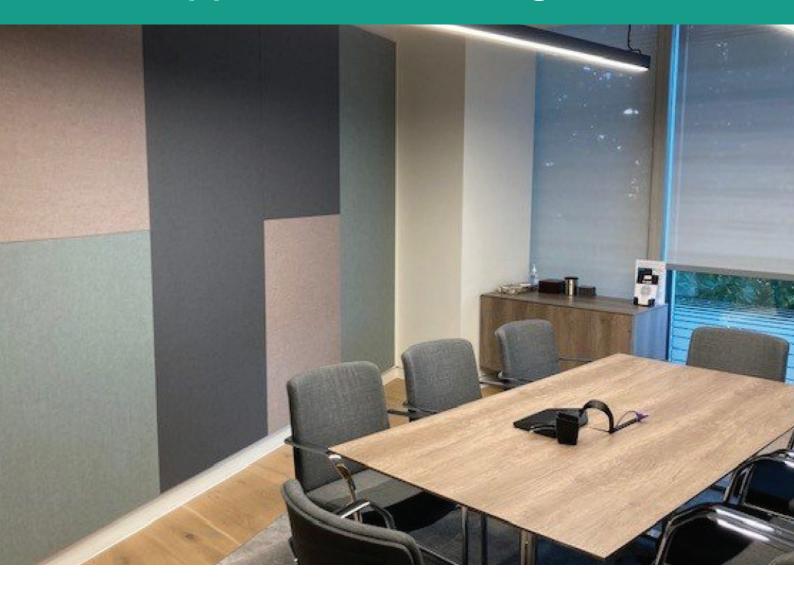

Simple and quick, easy to install Sound Absorption from our Comfort Range for wall and ceiling direct fix requirements.

## Overview

Standard and bespoke sizes available. Outstanding sound absorption performance – 40mm thick panel achieves Class A. Ideal for DIY installation, with a vast range of fabrics & colours available. Ceiling panels 1200 x 600mm max size.

## **Features**

Standard Panel Sizes:  $1200 \text{mm} \times 1200 \text{mm} / 1200 \text{mm} \times 1800 \text{mm} / 1200 \text{mm} \times 2100 \text{mm} / 1200 \text{mm} \times 2400 \text{mm} / 1200 \text{mm} / 1200 \text{mm} \times 2400 \text{mm} / 1200 \text{$ 

Bespoke panel sizes available

**Core Material:** Open Cell 40mm Foam Substrate tested and offers Class O fire rating to EN13501-1:2007 B-s1, do BS476:Part6

and 7 BS6853 Annex B2 & D.8.4

**Acoustic Performance:** Class A – 40mm thick panel

**Fabric Reference**: Camira Cara, Sonus **Fabric Lightness**: 5&6 (ISO 105-B02)

Fabric Fire Resistance: Camira Cara, Sonus (BS EN 13501-1

Class B,s1,d0)

Weight: 40mm thick Comfort Range panels weigh 4.5kgs/m2














## Installation

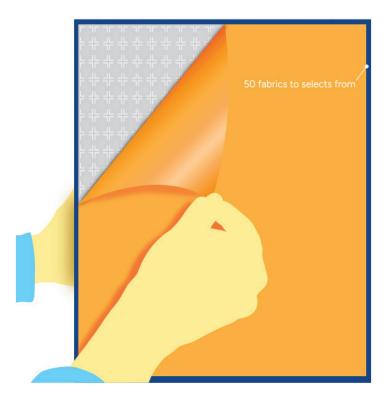

The panels must be handled with clean hands or with clean gloves to avoid marks to the panels.

Ensure all wall surfaces to which the panel will be applied to are clean and dry. Panels can be fixed to most surfaces including concrete, plasterboard and block work providing they are solid. Wallpaper should be removed. Emulsion paint brushed with a stiff brush. The surface where the panels are applied to must have no cold bridging and must be damp free. Any signs of condensation or dampness on the surfaces of the wall and ceilings must be covered and eliminated before applying the panels.

The surface must be 100% flat to make sure the panels are fixed securely. The panels have a peel off paper to the back which must be taken off and the panels must be immediately applied to the surface to make sure good adhesion is made.

Spray Adhesive must be applied to the ceiling and fully to the back of the panel for ceiling panel installation.



www.londonwall.co.uk info@londonwall.co.uk 020 8391 8750

London Wall Design Ltd 63 Barwell Business Park Chessington KT9 2NY